

OPERATING INSTRUCTIONS

- 1) **FIRE CONDITION:** In the event of a break glass call point or automatic detector being actuated the red fire lamps will be illuminated and the alarm will sound.
 - 2) The alarm sounders may be silenced by operation of the "SILENCE / RESOUND"* switch. pressing the "SILENCE / RESOUND"* button again, will resound the sounders, if required. The internal buzzer may be muted.
 - 3) Do not reset the system until the precise reason for a Fire Condition has been established and entered into the Log Book.
 - 4) To reset the system, replace any broken call point glasses and ensure that any cause of automatic detector operation has been removed, and that the sounders have been silenced., then operate the "RESET"* push button.
 - 5) To manually operate the sounders use the "EVACUATE"* push button. EVACUATE condition can be cleared by pressing the "SILENCE / RESOUND"* button and then the "RESET"* button.
 - 6) The panel continuously monitors for detector, sounder and power supply faults. If a fault is detected the "COMMON FAULT" lamp will be illuminated along with indication for specific fault. The internal buzzer will sound. This may be muted by pressing the "MUTE BUZZER"* button.
- * All push button switches are only operative when the "CONTROL ENABLE" key switch is in the "ON" position. Under normal conditions the operating keys should be removed from the panel and kept in a secure position under the control of responsible persons.